 


# Flexbake5 BREAD RECIPE EDIT- NEW FORMULA - JULY 2017



1. Turn on the oven and press the exclamation point (!) in the top right corner.

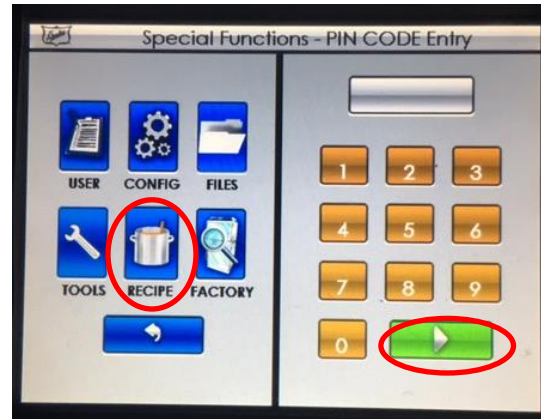

 
2. Press the Recipe button, enter the pin code "5678", then press the green 'play button'



3. You are now in "Recipe Edit" mode which is displayed in the upper left corner of the screen. Select "Full Bake" (or any of the other bread baking recipes that will be edited)



4. Once in the bread baking recipe, select "Stage 5".

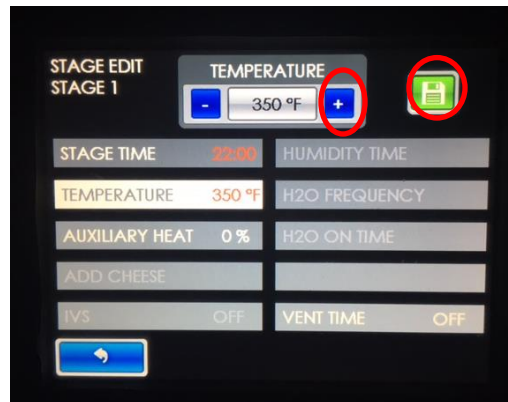

5. Press "Temperature", then change to "360" utilizing the "+" button, then press the green 'save' button in the upper right corner. When complete, press the back arrow.

6. Select Stage 6, then repeat changing the temperature to 360 (refer to step 5).

7. Once recipe editing is complete, press the back arrow until you reach the main menu.

-These steps will be repeated for each Bread baking recipe (Full Bake, Half Bake, Full Bake/Cheese, Half Bake/Cheese)

**\*\*Bread should be floor retarded to 55-60 degrees in the Flexbake Oven**