


## **Ouick Reference Users Guide**

## **OPERATIONS**

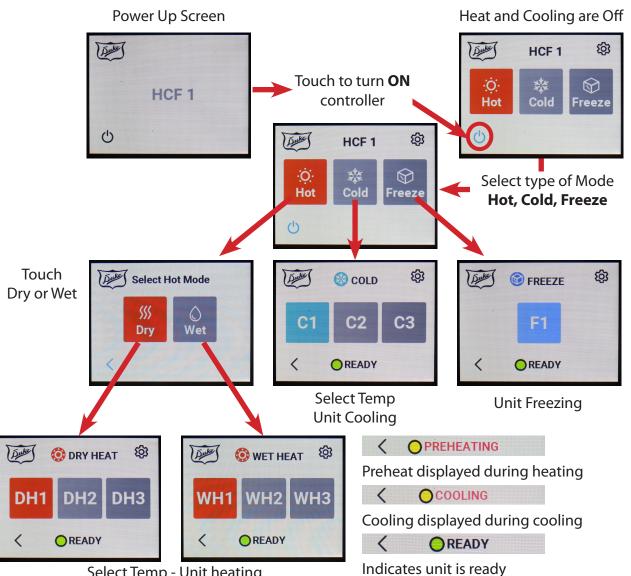





**NOTE:** For Wet Heat operation fill well with 1" HOT tap water min.



**NOTE:** Drain any water before switching to cold or freeze mode.


Estimated Conversion Times - Minutes			
Ambient to Hot Dry	10-15	Ambient to Freeze	45-60
Ambient to Hot Wet	45-60	Hot to Cold	40-60
Ambient to Cold	30-40	Hot to Freeze	60-80

**CAUTION** The use of heat lamps and/or incandescent lighting, with the cold or freeze modes, will reduce the performance of the units.


**CAUTION:** 

Please read these instructions completely before attempting to install, operate or service this equipment.

## **CHANGING SETTINGS**

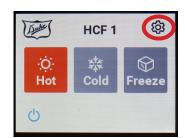




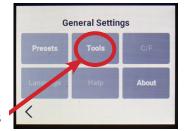

Access must be unlocked before any changes.



Select Tools

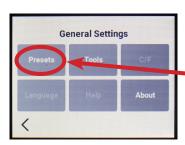

Touch the locked icon to unlock

After gaining access, select the PRESETS button to go to a list of: HOT, COLD, FREEZE set points. Use the right or left arrow buttons to go to a screen list of each mode configuration.








Select the EDIT icon from the Preset list to go to the setting screen.

**Note:** If the Edit Icon is gray or not functioning the access is locked.

**Note:** Some configurations and functions require a **PIN** code to enter.

These items are outside normal use of the unit.



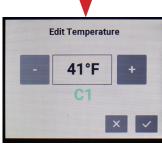



Use the plus 

or minus 

buttons to adjust the set point. 

Select the Check Mark 

to save the changes.

**Note:** Go back and re-lock your settings



