




Your Solutions Partner

Quick Reference Users Guide Ganged Waterless Well


Note: DO NOT add water to well

TOUCH SCREEN OPERATION


- 1** Plug unit into appropriate power receptacle.

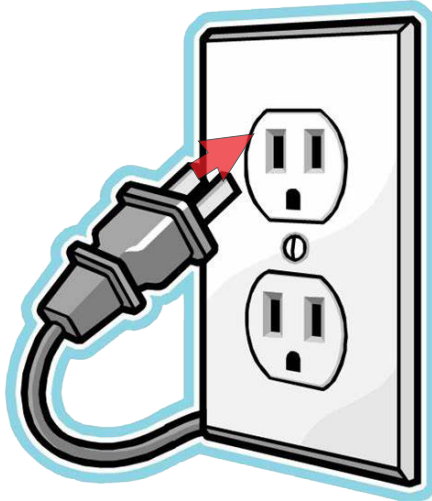


- 3** The main runtime screen will appear. If the unit contains more than one well, the screen will show an icon for each well. On a multi-well unit, press an icon for a well to turn on.

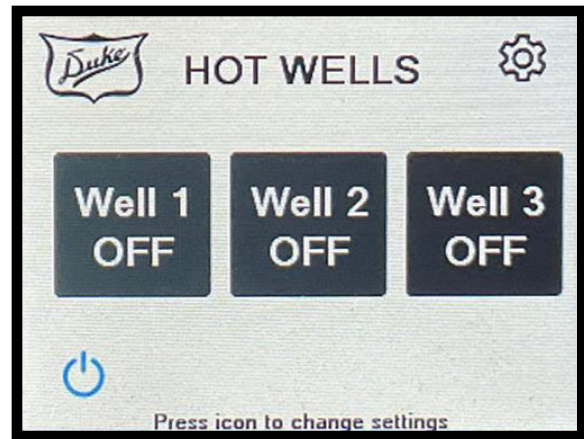

- 2** Press power button icon on screen to turn on unit.

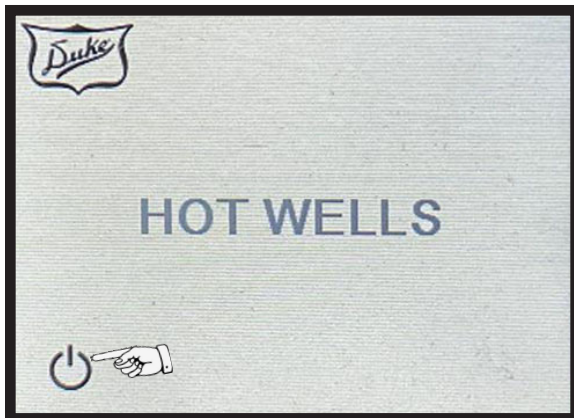

- 4** Press the icon for the temperature level required. The bottom of the screen will indicate well status. Press the back arrow in the top right corner to return to the main screen.

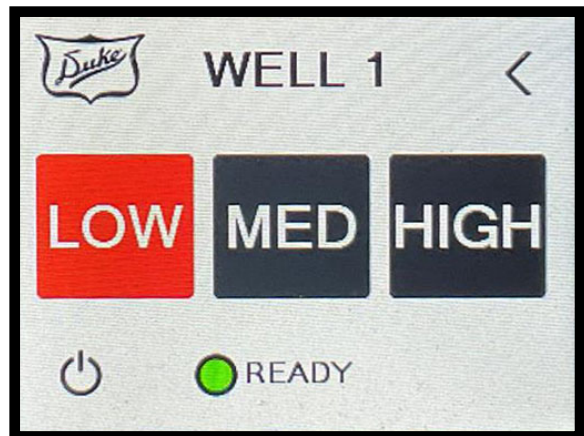


On a multi-well unit, press the ON/OFF icon to turn ON/OFF an individual well.

CAUTION: Please read these instructions completely before attempting to install, operate or service this equipment.


TOUCH SCREEN OPERATION

- 5 The icon for the well will turn green to indicate the status of the well as ready.

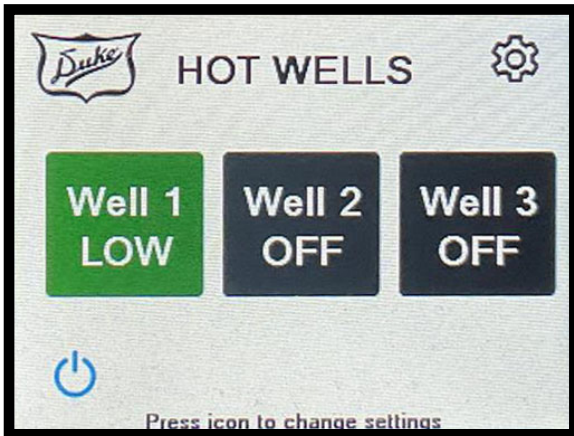


- 6 The Waterless Well must be full of pans during use. If any section of the well is not being used to hold product, it must be filled with an empty pan and lid.

- 7 Repeat step two (3) thru four (5) for additional wells.

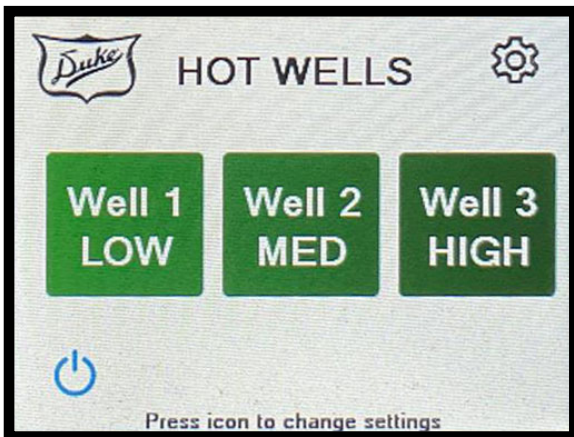

- 8 To turn off a single well, press the ON/OFF icon on that wells display page. The display will return to the main page.

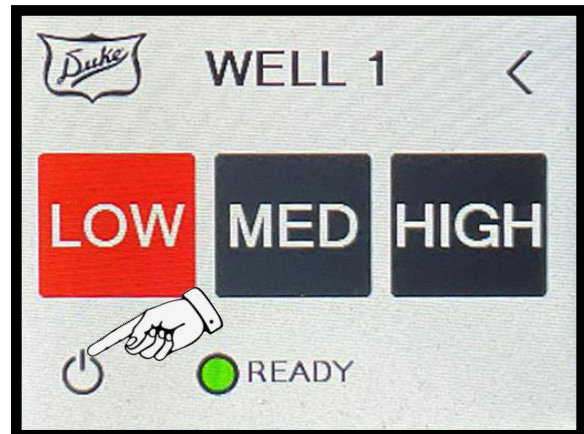


Note: To turn off all wells at once go to the main page and press the ON/OFF Icon.

- 9 If a fault has occurred, the status message will indicate "FAULT"




CHANGING SETTINGS

- 1 Select the **settings icon**. This will take you to the general settings screen

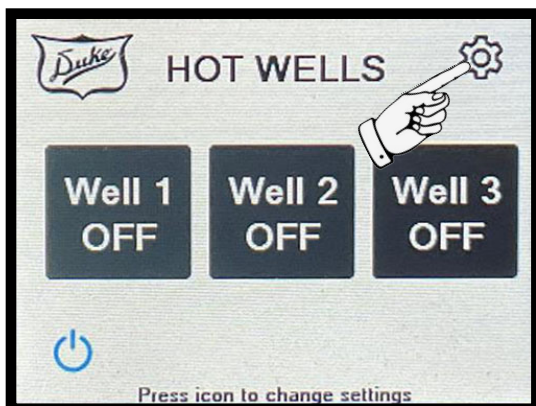


- 2 In the General Settings screen select **Tools**.

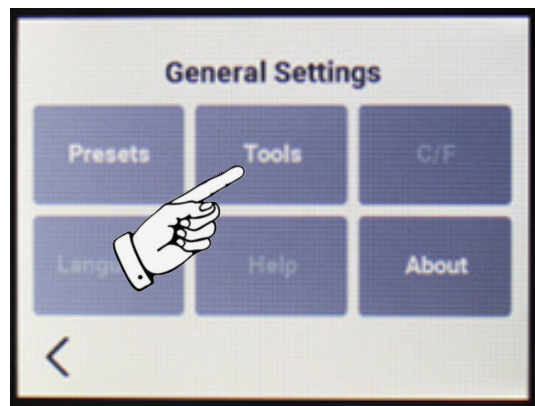


CHANGING SETTINGS


3 In the tools screen selects **Admin**

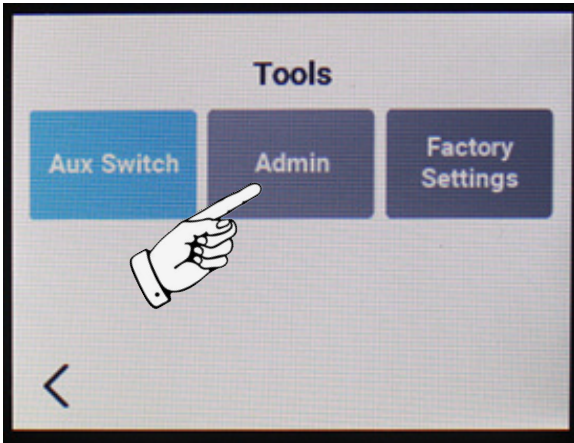


4 Enter Code 0654 for the **PIN** Code

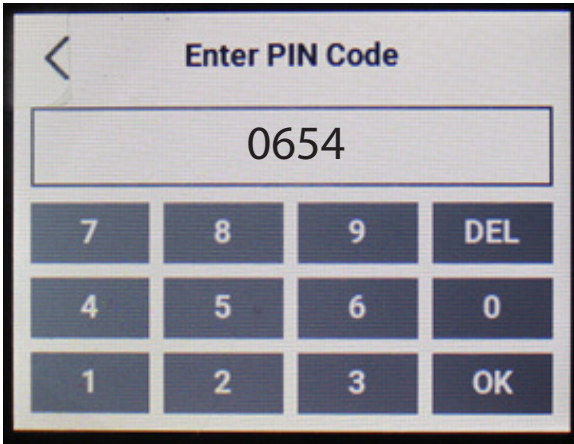


5 By default Presets will be "Locked"
Slide the toggle to the unlock position and select the check mark this will take you back to the General Settings Screen.

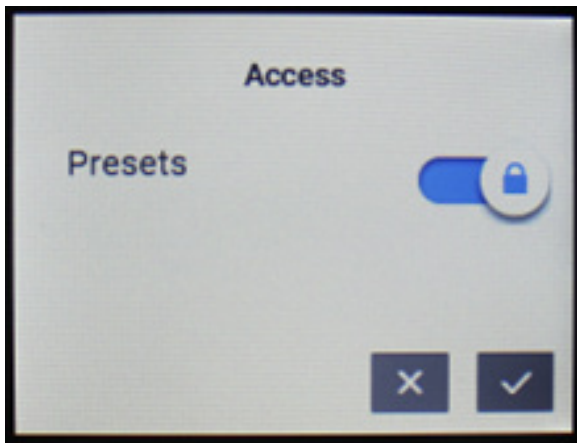


6 Now select Presets.

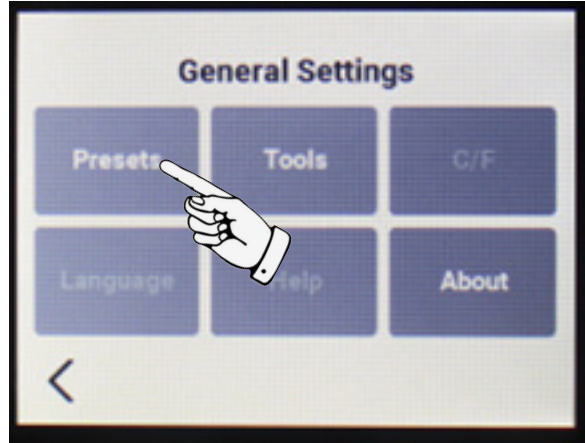


7 The 3 current presets will be displayed. Low, Medium and High. To edit one of the presets select the edit icon next to the appropriate preset in the Actions column.

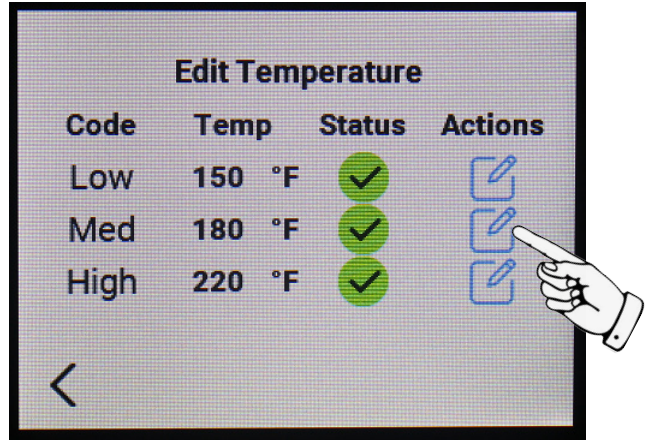


8 Use the Plus and Minus buttons to modify the Temperature. The temperature will decrease or increase by 1 with each button press. When done select the **CHECK** button to save or the **X** to cancel.
NOTE: Temperature is a setpoint, NOT food temperature.

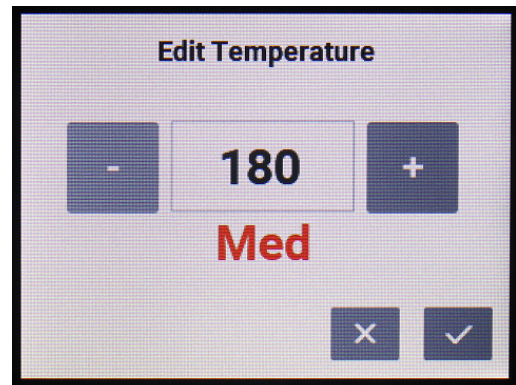

9 Return to the Access screen and lock the presets.

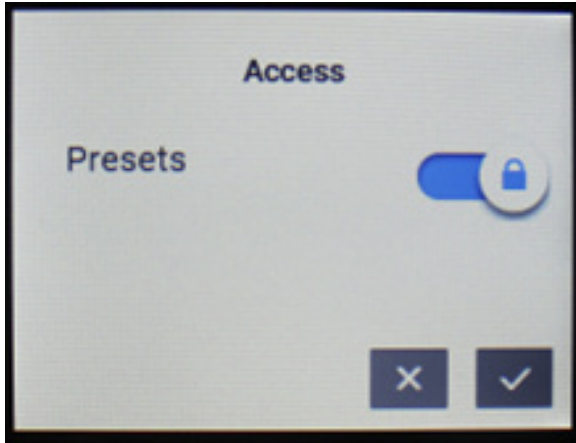

10 Return to the main screen. The new set point will now be used for the appropriate runtime screen.

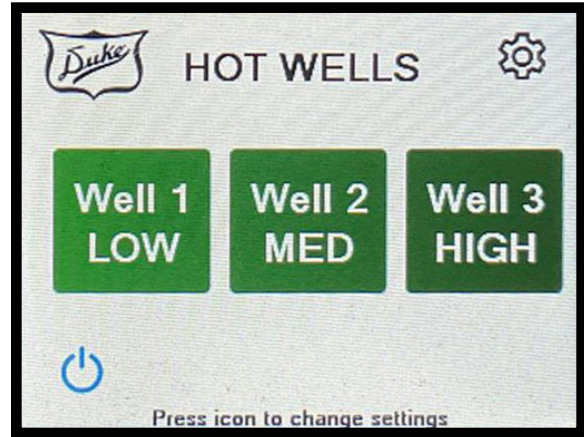

CLEANING

- Before cleaning the unit, switch it off with the button.
- Leave the unit to cool.
- Finally, wipe the unit down with warm soapy water.
- All housing parts are made of stainless steel and can be cared for and treated with commercially available stainless steel cleaning products.
- Do not use abrasives, steel wool or similar.
- After cleaning, use a soft cloth to dry and polish the surface.

TROUBLE SHOOTING

SYMPTOM	CAUSE	REMEDY
Element Does Not Heat:	Electrical power disconnected	Plug in unit
	Power source circuit breaker tripped	Check circuit breaker and reset
	Corroded or loose connections	Check and tighten all connections

This manual is Copyright © 2022 Duke Manufacturing Co. All rights reserved. Reproduction without written permission is prohibited. Duke is a registered trademark of the Duke Manufacturing Co.



Duke Manufacturing Co.
2305 N. Broadway
St. Louis, MO 63102

Phone: 314-231-1130
Toll Free: 1-800-735-3853
Fax: 314-231-5074

www.dukemfg.com