



Your Solutions Partner


Quick Reference Users Guide

Drop-In Waterless Well

OPERATION




NOTE: DO NOT add water to well


1 Press power button  to turn on unit.




2 The runtime screen appears. Unit is in "preheat mode". Select temp setting, Low Mid or High

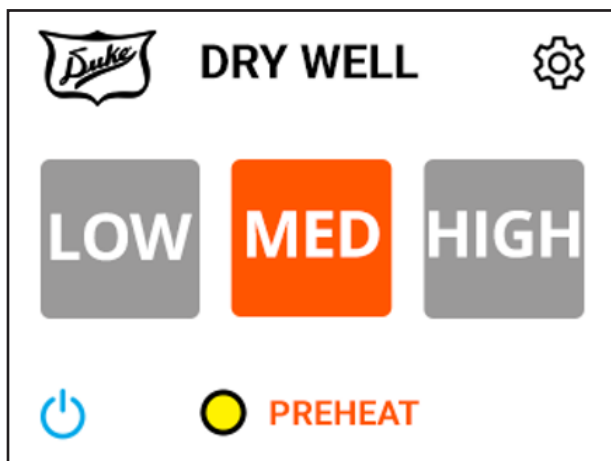

3 Display changes to "READY" after the Dry Well reaches temperature for preset.

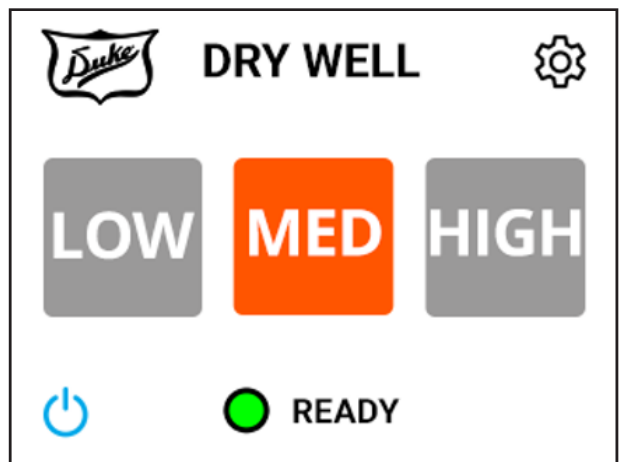


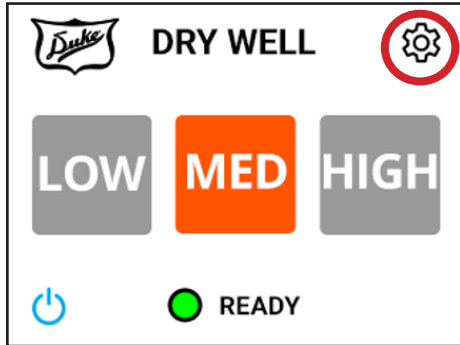
4 The Waterless Well must be full of pans during use. If any section of the well is not being used to hold product, it must be filled with an empty pan and lid.

5 Press power button  to turn off unit.


CAUTION: Please read these instructions completely before attempting to install, operate or service this equipment.

OPERATION - Changing Settings


1 Press settings button  to enter General Settings Screen.




4 Enter pin number. "0654" and select OK.

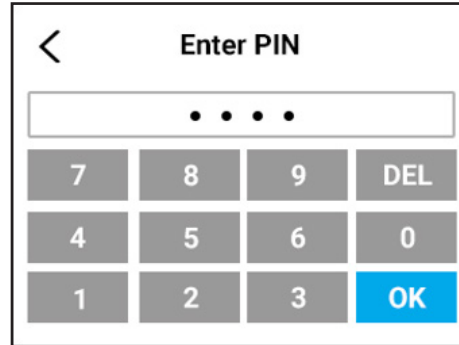


7 You will need to select the back arrow 2 times to get back to the General Settings screen.

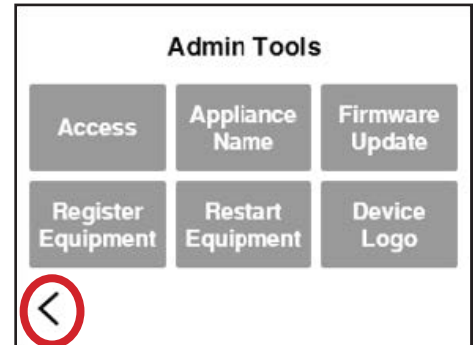


2 Press "Tools" to enter the Dry Well Config screen

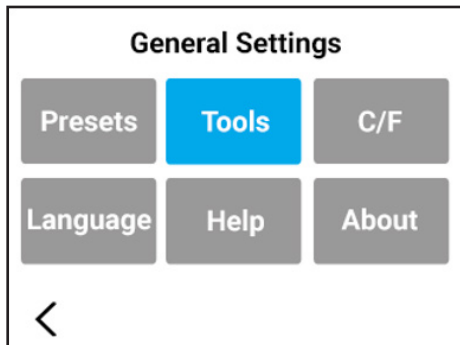


5 Press "Access."

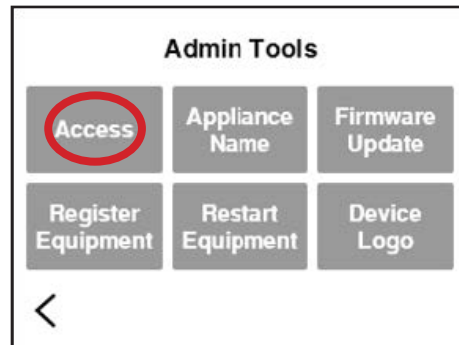


8 Press the Presets button to enter the Dry Well Configuration page.

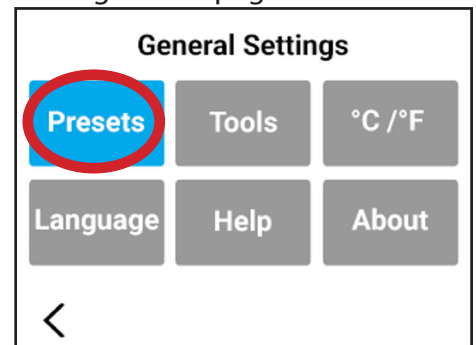



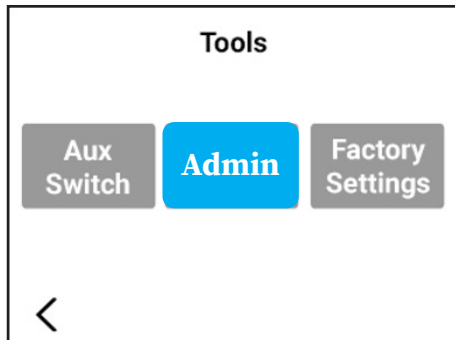




3 Press "Admin" button.



6 Slide the lock icon to unlock the presets. Press the checkmark  to save the setting.




9 Select the edit icon  next to the code to be reprogrammed.

| Code | Temp | Status | Actions |
|------|--------|---|---|
| LOW | 150 °F |  |  |
| MED | 180 °F |  |  |
| HIGH | 220 °F |  |  |


OPERATION - Changing Settings

10 Using the plus or minus buttons set the new temperature and touch the check "✓" to save. To abort touch the X button.

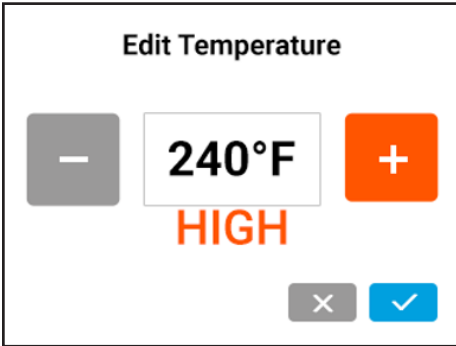

NOTE: Settings are not food temperatures.


12 Press "Admin."

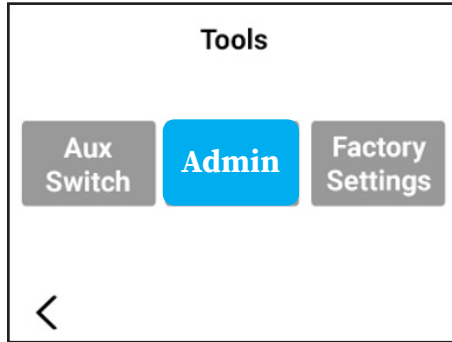


14 Slide the lock icon to lock the presets, Press the check to save the setting.




11 Pressing the back arrow will take you to the General setting screen where you press "Tools"

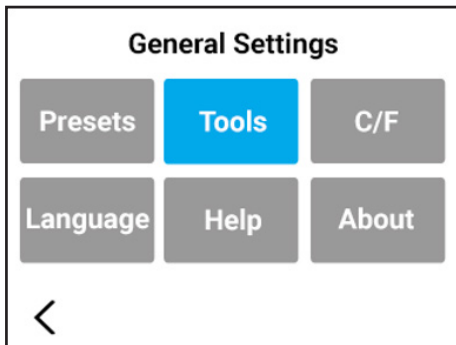


13 Press "Access."

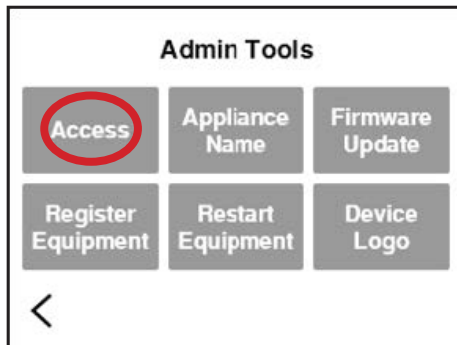

15 Press the back arrow 3 times to return to the main screen

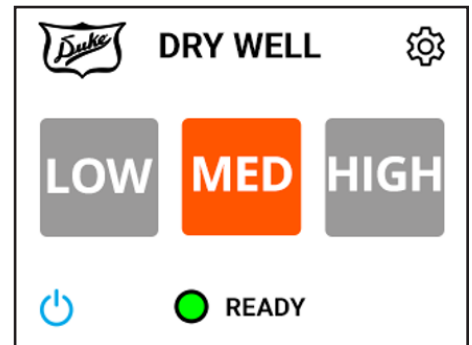

CLEANING

- Before cleaning the unit, switch it off with the  button.
- Leave the unit to cool.
- Finally, wipe the unit down with warm soapy water.
- All housing parts are made of stainless steel and can be cared for and treated with commercially available stainless steel cleaning products.
- Do not use abrasives, steel wool or similar.
- After cleaning, use a soft cloth to dry and polish the surface.

WARNING

The device is not suited for direct washing with a water jet. Therefore, do not use a pressure water jet to clean the device!

TROUBLESHOOTING

| SYMPTOM | CAUSE | REMEDY |
|------------------------|--------------------------------------|-----------------------------------|
| Element Does Not Heat: | Electrical power disconnected | Plug in unit |
| | Power source circuit breaker tripped | Check circuit breaker and reset |
| | Corroded or loose connections | Check and tighten all connections |



Your Solutions Partner

Duke Manufacturing Co.
2305 N. Broadway
St. Louis, MO 63102

Phone: 314-231-1130
Toll Free: 1-800-735-3853
Fax: 314-231-5074

www.dukemfg.com