




# Quick Reference Users Guide No Drain, Dry Heat Only

## OPERATIONS

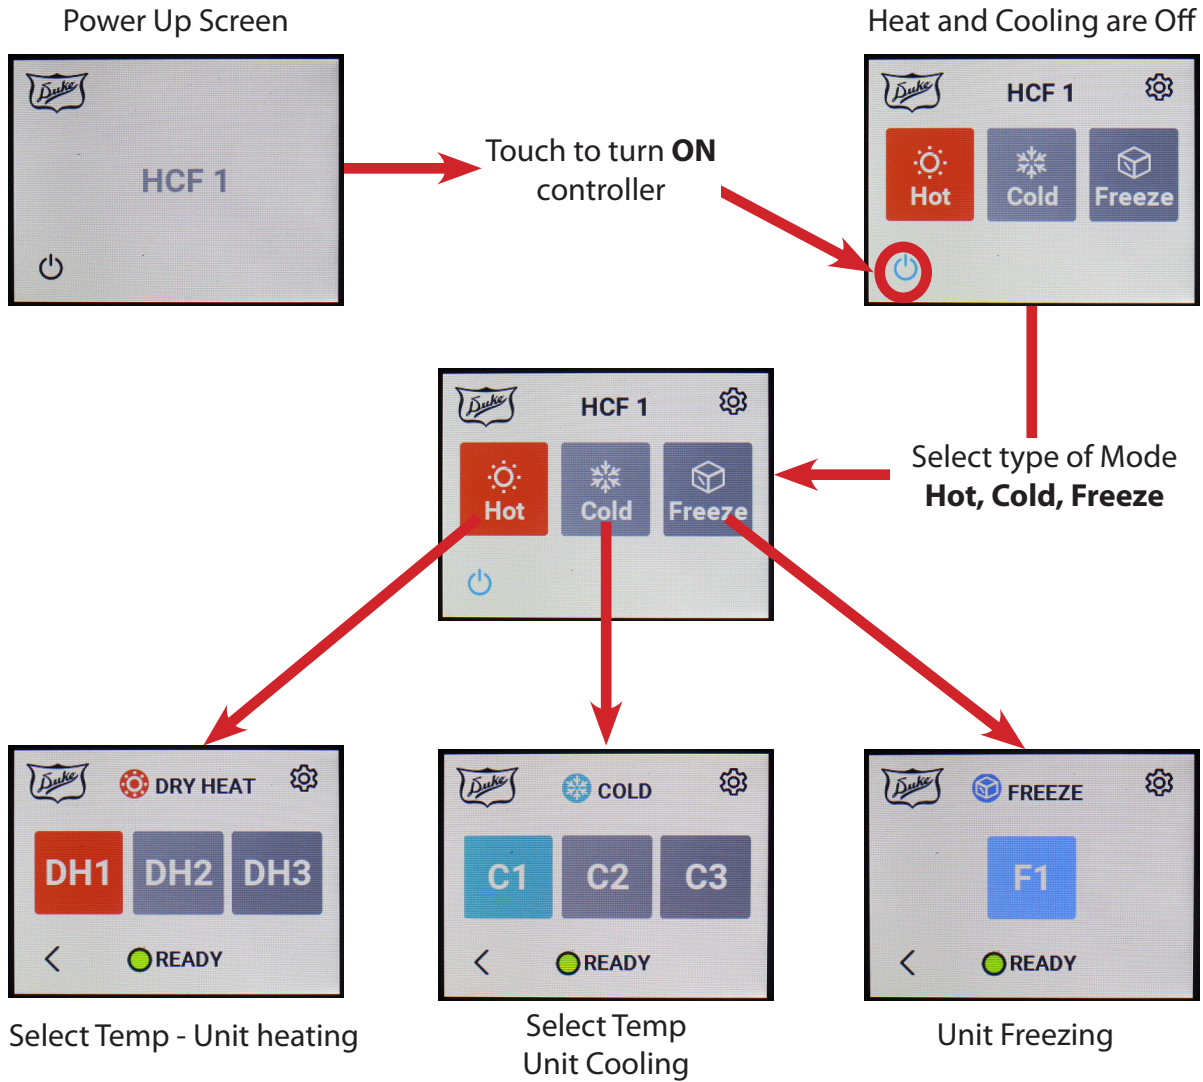

< ● PREHEATING

Preheat displayed during heating

< ● COOLING

Cooling displayed during cooling

< ● READY


Indicates unit is ready

Estimated Conversion Times - Minutes			
Ambient to Hot Dry	10-15	Ambient to Freeze	45-60
Ambient to Cold	30-40	Hot to Freeze	60-80


**CAUTION** The use of heat lamps and/or incandescent lighting, with the cold or freeze modes, will reduce the performance of the units.

**CAUTION:** Please read these instructions completely before attempting to install, operate or service this equipment.

# CHANGING SETTINGS


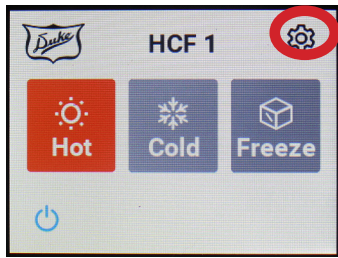


Select Tool Icon


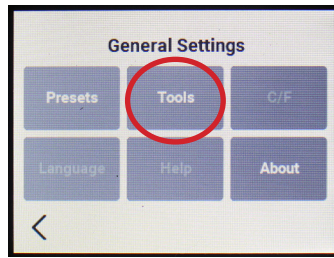


Access must be unlocked before any changes.


Select Tools

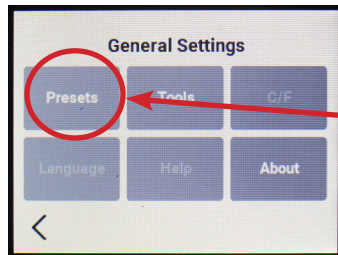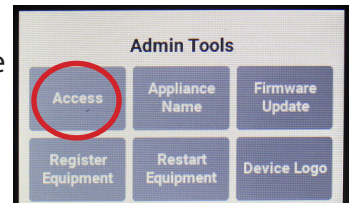

Touch the locked icon to unlock

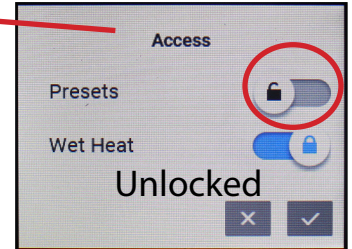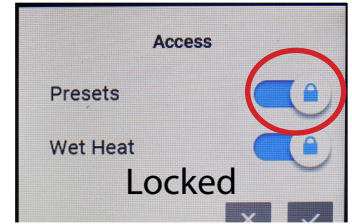


After gaining access, select the PRESETS button to go to a list of: HOT, COLD, FREEZE set points. Use the right or left arrow buttons to go to a screen list of each mode configuration.

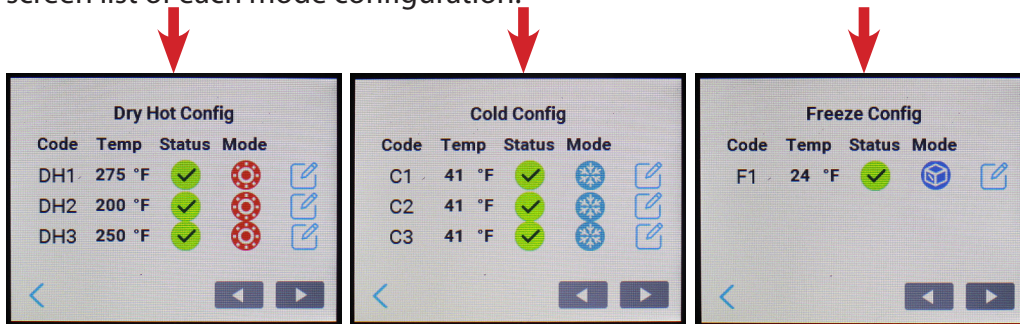

**Note:** If the Edit Icon is gray or not functioning the access is locked.

**Note:** Some configurations and functions require a PIN code to enter. These items are outside normal use of the unit.

Select the EDIT icon from the Preset list to go to the setting screen.

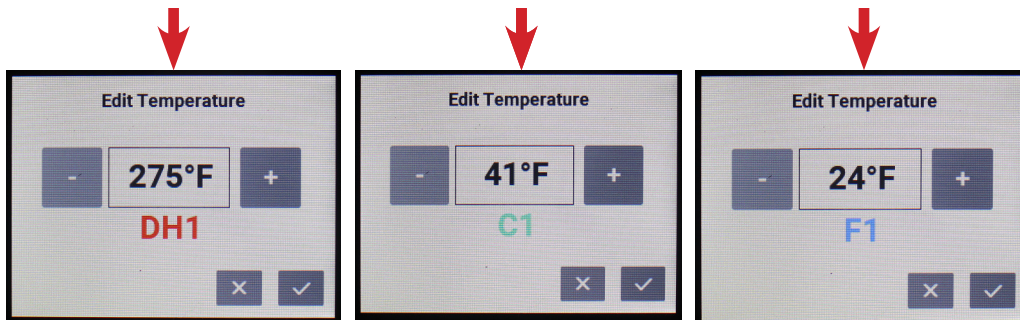

Use the plus or minus buttons to adjust the set point. Select the Check Mark to save the changes.

**Note:** Go back and re-lock your settings

